



GPR & Housing O-ring Replacement Kit Part # GP-500



41041 Black Bayou Rd, Gonzales, Louisiana, USA 70737
 Phone (225) 644-5255 FAX (225) 644-3975
 www.geniefilters.com sales@geniefilters.com

© 2005 A+ Corporation, LLC. All rights reserved. Revision 12.2005




GPR

GP/GPR Housing



Be Careful Not To Scratch Sealing Surfaces When Removing O-rings

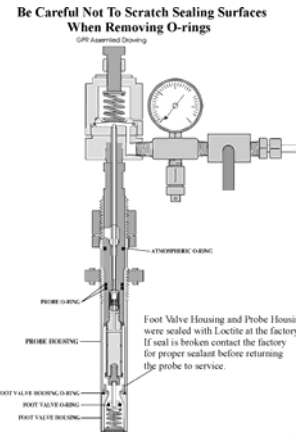GPR Assembled Drawing




Foot Valve Housing and Probe Housing were sealed with Loctite at the factory. If seal is broken contact the factory for proper sealant before returning the probe to service.

2

1 2

1. Unscrew the Allen cap screw.
2. Remove the Membrane ferrule.



© 2005 A+ Corporation, LLC. All rights reserved. 3




3 4

3. Remove the Membrane & Membrane Support Screen.
4. Unscrew the Membrane Support Member.



© 2005 A+ Corporation, LLC. All rights reserved. 4

Remove the two Probe o-rings and the Atmospheric o-ring.




Atmospheric o-ring

Probe o-rings


5

Replace the Probe o-rings first.
 Then replace the Atmospheric o-ring.
 Be sure not to over-stretch or cut the o-ring.
 Additional Krytox® lube may be used



Atmospheric O-ring Probe O-rings

6

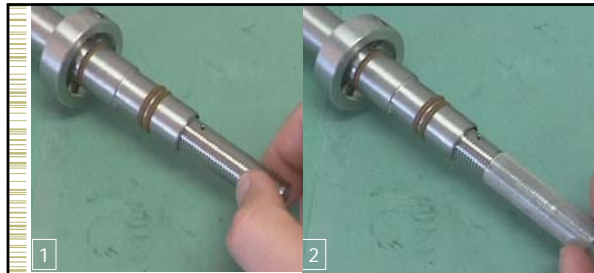

1. Replace the Membrane Support Member.
2. Next, replace the membrane & membrane support screen according to the Membrane Replacement Kit Instructions GP-506.



© 2005 A+ Corporation, LLC. All rights reserved.

7

GP/GPR Housing

GPR

Be Careful Not To Scratch Sealing Surfaces When Removing O-rings

GPR Assembled Drawing

Foot Valve Housing and Probe Housing were sealed with Loctite at the factory. If seal is broken contact the factory for proper sealant before returning the probe to service.



8