

## Instructions maintenance de membrane GPSD

### Outilage et Matériaux

#### Quantit<sup>2</sup> & Description

Er<sup>2</sup> 'CNNGP "5/32" (qt<sup>2</sup> 1)

### Installation du kit de Membrane



Talsico® Process Picture Maps™ and all associated intellectual property are owned by Talsico International, ABN 20 419 167 619, and subject to licensing agreement. Duplication or use of this methodology or format is prohibited without the written permission of Talsico. [www.talsico.com](http://www.talsico.com)

### Overview Instructions & Explications

#### 1 Retirer l'embout de la tige de la membrane



- 1.1 Utiliser un tournevis à tête plate de 5/32" pour dévisser le bouchon de la tige de la membrane.
- 1.2 Lever le bouchon de la tige de la membrane.

#1

Retirer

#2

Jeter

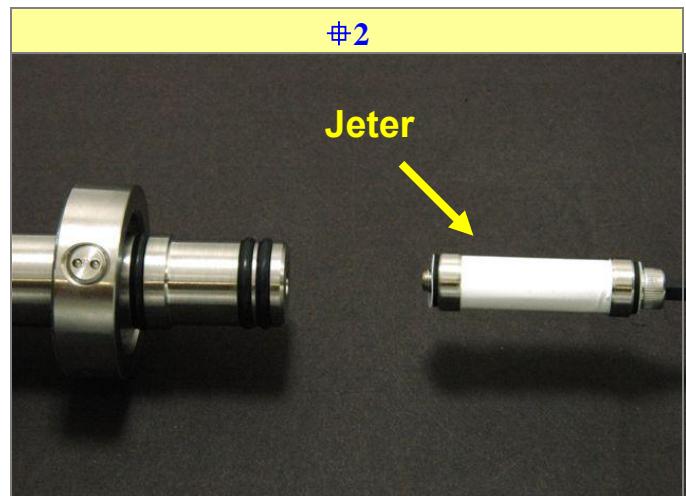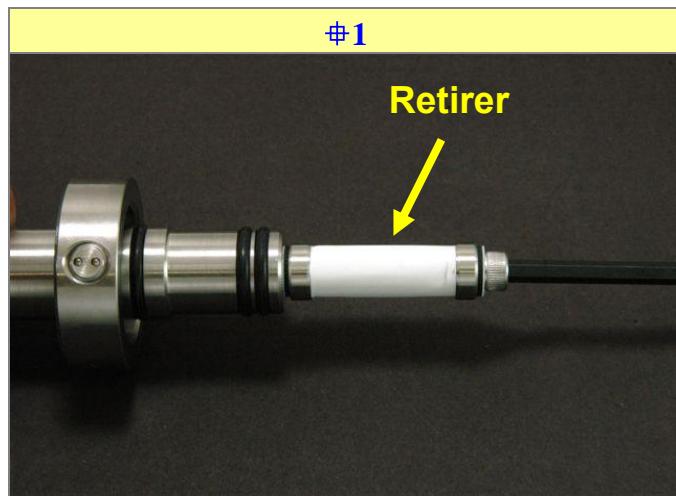

## 2 Installez la membrane

- 2.1 ! Vos mains doivent être propres avant tout intervention. Toute trace d'huile, de lotion, de graisse ou tout autre contaminant chimique peut endommager la membrane.
- 2.2 Retirer le kit de membrane de son emballage #3
- 2.3 Dévisser et jeter l'écrou papillon en plastique blanc #4
- 2.4 Utiliser une clé ALLEN 5/32" et installer le nouveau kit de membrane sur la canne. Le serrage doit s'effectuer à une valeur de couple de 10 in/lbs (1.2 N/m). #5 #6

