


## INSTALLATION INSTRUCTIONS OF SOCLEMA PROBE OUTLET MANIFOLD



- 1- Apply thread sealant (Teflon tape) or Loctite to the manifold inlet port.
- 2- Thread the manifold at the sampling probe or regulator outlet.
- 3- Connect the manifold outlet to the sample line.

Sampling probe or regulator

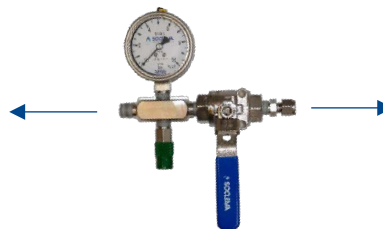

Sampling line