

## Probe Regulator Seat Replacement Instructions

For use with stamped GPR washer revision O



41041 Black Bayou Rd, Gonzales, Louisiana, USA 70737  
Phone (225) 644-5255 FAX (225) 644-3975  
www.geniefilters.com sales@geniefilters.com



Revision 12.05



NOTE: The membrane should be replaced each time the Regulator Seat is replaced.

1) Remove GPR from Housing



2



2) Remove the allen cap screw with a 3/16" Allen wrench



3) Remove Membrane Ferrule, Support Screen and Support Member



3



O-ring




4) Unscrew the regulator valve seat assembly from the probe.



4

Regulator Seat →

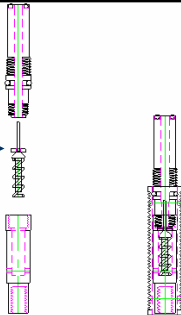

5) Unscrew the two halves of the Valve Seat Assembly. Replace Regulator Seat as shown above. The non-beveled side of the seat should face the valve stem. Reassemble the valve seat assembly – use two 5/16" open-end wrenches to tighten the two halves of the assembly.



5

6) Replace the valve seat assembly into the probe.

7) Refer to the membrane installation instruction Rev: 08/02 to replace the membrane.



6