

**GPR & Xc] [hXY [Ubh
Rea placement Xi _]hXY
^c]bh# GP-500**



41041 Black Bayou Rd, Gonzales, Louisiana, USA 70737
Phone (225) 644-5255 FAX (225) 644-3975
www.geniefilters.com sales@geniefilters.com

Revision 12.2005


© 2005 A+ Corporation, LLC. All rights reserved.

GPR

GP/GPR
Doigt de gant

**Be Careful Not To Scratch Sealing Surfaces
When Removing O-rings**

GPR Assembled Drawing

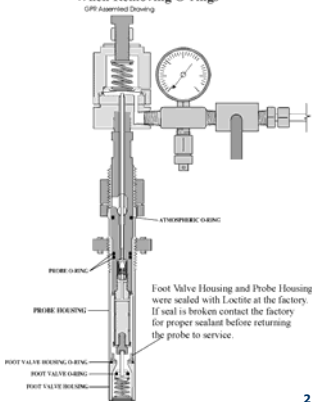

Foot Valve Housing and Probe Housing were sealed with Loctite at the factory. If seal is broken contact the factory for proper sealant before returning the probe to service.

2




1 2

1. Dévisser la vis 6 pans.
2. Retirer la butée de membrane.



© 2005 A+ Corporation, LLC. All rights reserved.

3




3 4

3. Retirer la membrane pour accéder au support de membrane.
4. Dévisser le support de membrane



© 2005 A+ Corporation, LLC. All rights reserved.

4

Retirer les eux joints toriques de la canne et le joint atmosphère.




Joint atmosphère

Joints de canne

5

Remplacer les joints toriques de canne en premier puis le joint atmosphérique.
S'assurer de ne pas sur-étirer/couper les joints
Utiliser un lubrifiant Krytox® si besoin



Joint Atmosphérique

Joint de canne

6



1. Remplacer le support de membrane
2. Puis, replacer la membrane selon les instructions de maintenance du kit de membrane GP-506.



© 2005 A+ Corporation, LLC. All rights reserved.

7

**Be Careful Not To Scratch Sealing Surfaces
When Removing O-rings**

GPR Assembled Drawing

Foot Valve Housing and Probe Housing were sealed with Loctite at the factory. If seal is broken contact the factory for proper sealant before returning the probe to service.



8